





Table of Contents




| 1. In | troduction | 3 |
|-------|--|----|
| 2. M | SER-FPD Rev 1.30 | 4 |
| 2.1 | FAKRA Connector | 4 |
| 2.2 | Flex Cable Connection with Stiffener on the MSER-FPD | 5 |
| 2.3 | I/O Signals of MSER-FPD | 8 |
| 2.4 | I2C I/O Expander Configuration | 9 |
| 2.5 | I/O Connector | 10 |
| 26 | On-hoard IFDs | 11 |



1 Introduction

This document describes the function of the MSER-FPD MIPI serializer board which is based on the Texas Instruments MIPI-to-FPD-Link III serializer chip, DS90UB953-Q1. The cameraside serializer board and platform-side deserializer board enable distances of up to 15m between any TISMIPI sensor and embedded system using a coaxial cable. The connection of these components is shown below:

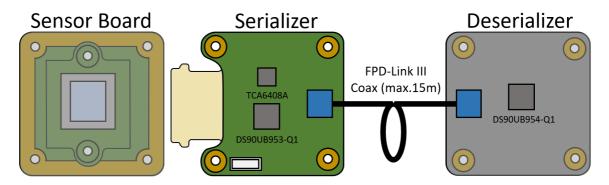


The document "Deserializer Design Recommendations" contains important information required to create a custom deserializer design using the TI DS90UB954-Q1 chip.



2 MSER-FPD Rev 1.30

The MSER-FPD board (Rev. 1.30) is shown below:

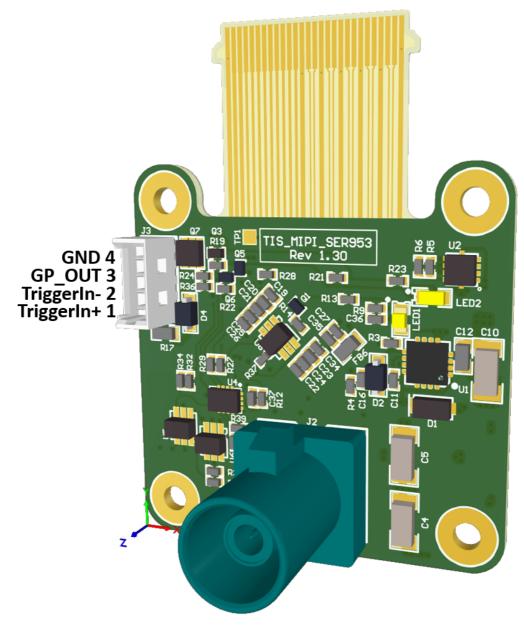


2.1 FAKRA Connector

The manufacturer part number of the Adam Tech FAKRA connector is RF55-28Z-T-00-50-G-SH. The recommended cable type is RG-174 with 50 Ohm impedance. Please contact The Imaging Source for available assembled cables.



2.2 Flex Cable Connection with Stiffener on the MSER-FPD

The flex cable connection with stiffener has the following pinout:

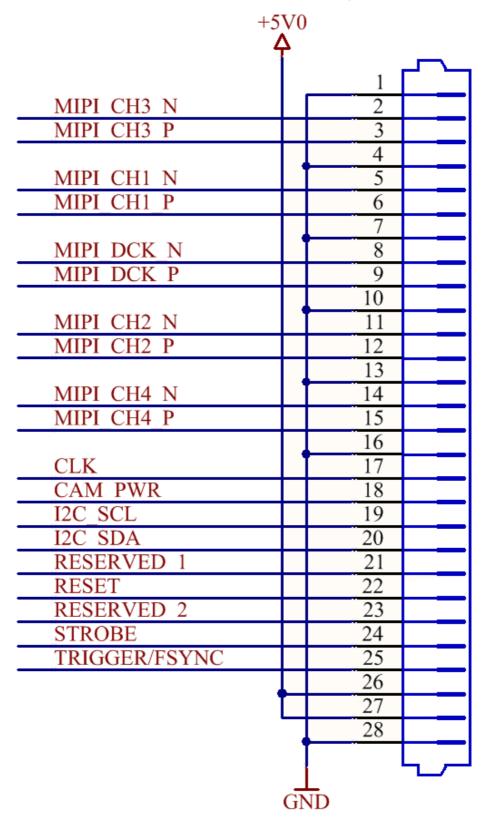



| # | Name | Туре | Description |
|----|---------------|------|--|
| 1 | GND | GND | Ground |
| 2 | MIPI_CH3_N | I | MIPI CSI-2 input |
| 3 | MIPI_CH3_P | I | MIPI CSI-2 input |
| 4 | GND | GND | Ground |
| 5 | MIPI_CH1_N | I | MIPI CSI-2 input |
| 6 | MIPI_CH1_P | I | MIPI CSI-2 input |
| 7 | GND | GND | Ground |
| 8 | MIPI_DCK_N | 1 | MIPI CSI-2 input |
| 9 | MIPI_DCK_P | 1 | MIPI CSI-2 input |
| 10 | GND | GND | Ground |
| 11 | MIPI_CH2_N | I | MIPI CSI-2 input |
| 12 | MIPI_CH2_P | 1 | MIPI CSI-2 input |
| 13 | GND | GND | Ground |
| 14 | MIPI_CH4_N | I | MIPI CSI-2 input |
| 15 | MIPI_CH4_P | I | MIPI CSI-2 input |
| 16 | GND | GND | Ground |
| 17 | CLK | 0 | Reference clock output |
| 18 | CAM_PWR | 0 | High active camera power enable signal |
| 19 | I2C_SCL | I/O | I2C Serial clock |
| 20 | I2C_SDA | I/O | I2C Serial data |
| 21 | RESERVED_1 | I/O | Reserved pin 1 |
| 22 | RESET | 0 | Reset sensor to default state when low |
| 23 | RESERVED_2 | I/O | Reserved pin 2 |
| 24 | STROBE | I | CMOS sensor strobe signal input |
| 25 | TRIGGER/FSYNC | 0 | Trigger signal output |
| 26 | +5V_VDD | PWR | 5V (±10%) power supply |



| # | Name | Туре | Description |
|----|---------|------|------------------------|
| 27 | +5V_VDD | PWR | 5V (±10%) power supply |
| 28 | GND | GND | Ground |



2.3 I/O Signals of MSER-FPD

The connected I/O signals on the serializer chip DS90UB953-Q1 (Texas Instruments) are listed in the following table:

| Pin | Name | Dir | Description |
|------------|---------------------|-----|---|
| 17 (GPIO0) | STROBE | I | Strobe signal from sensor board |
| 18 (GPIO1) | TRIGGER_SER | I | External trigger signal from serializer board |
| 27 (GPOI2) | TRIGGER | 0 | Trigger signal from deserializer board |
| 28 (GPOI3) | RESERVED1_ GPIO3 | I/O | Reserved signal |

Since the DS90UB953-Q1 serializer chip does not have enough free I/O-pins, an I2C I/O expander (Texas Instruments TCA6408A) has been placed on the board. The following table shows which I/O signals on the flex cable connection are connected directly to the DS90UB953-Q1 and which signals are controlled by the I2C I/O expander:

| Pin | Name | Dir | Description | Pin at DS90UB953 | Pin at I2C I/O Expander |
|-----|------------|-----|----------------------------------|---------------------|----------------------------|
| 17 | CLK | 0 | Sensor clock | CLK_OUT (19) | |
| 18 | CAM_PWR | 0 | Camera power enable, active high | | GPIO0 (Pin 2) |
| 19 | I2C_SCL | I/O | I2C-Bus, clock | 12C_SCL (24) | |
| 20 | I2C_SDA | I/O | I2C-Bus, data | 12C_SDA (23) | |
| 21 | RESERVED_1 | I/O | Reserved | GPIO3 (28) | |
| 22 | RESET | 0 | Sensor reset signal, active low | | GPIO1 (Pin 3) |
| 23 | RESERVED_2 | I/O | Reserved | | GPIO7 (Pin 10) |
| 24 | STROBE | I | Sensor strobe signal | GPIO0 (17) | |
| 25 | TRIGGER | 0 | Sensor trigger signal | GPIO2 (27) | |

All I/Os have the same I/O voltage of 1.8V.



2.4 I2C I/O Expander Configuration


The I/O expander TCA6408A has the 7-bit I2C-address 0x20. The table below depicts which signals can be controlled through this expander:

| I/O Pin | Name | Dir | Description |
|---------|----------------|-----|--|
| P0 | CAM_PWR | 0 | Enable CMOS sensor power supply 0: Sensor power disabled 1: Sensor power enabled |
| P1 | RESET | 0 | CMOS sensor reset signal 0: Sensor is in reset state 1: Sensor is in operational state |
| P2 | GPOUT_LEVEL | 0 | If GPOUT_SELECT = 0:>0: LED1 off>1: LED1 on If GPOUT_SELECT = 1:>0: GPOUT is low/0 V>1: GPOUT is tri-stated or high/+5V (depends on the setting of GPIO3) |
| P3 | GPOUT_PUSHPULL | 0 | GPOUT (PicoBlade) type selection 0: GPOUT is configured as open-drain-output 1: GPOUT is configured as TTL/push-pull-output |
| P4 | GPOUT_SELECT | 0 | Function of GPOUT (PicoBlade) Pin 0: STROBE from CMOS sensor board 1: GPOUT_LEVEL from serializer board |
| P5 | TRIGGER_LEVEL | 0 | Controls the polarity of the trigger input on the PicoBlade connector. 0: Trigger source level polarity is not inverted 1: Trigger source level polarity is inverted |
| P6 | TRIGGER_SOURCE | 0 | Controls the source of the trigger signal that is forwarded to the sensor. 0: Sensor is triggered by the trigger signal coming from the FPD-Link / deserializer chip. 1: Sensor is triggered by the trigger signal that is applied to the PicoBlade I/O connector. |
| P7 | RESERVED_2 | 0 | Reserved |



2.5 I/O Connector

The serializer also has a user GPIO I/O connector with the following pinout:

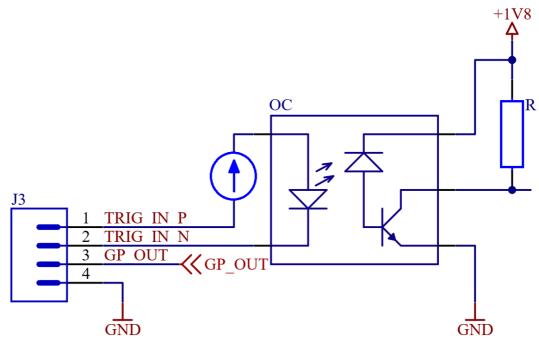

| Pin | Name | Description |
|-----|--------------|---|
| 1 | TRIGGER_IN_P | Opto-decoupled trigger input, anode of IR-LED |
| 2 | TRIGGER_IN_N | Opto-decoupled trigger input, cathode of IR-LED |
| 3 | GP_OUT | General purpose output, referenced to GND |
| 4 | GND | System ground |

The trigger input is opto-decoupled. To drive the trigger input, a voltage must be applied to pins 1 and 2. Note: pin 1 is the positive input; pin 2 is the negative input.

Pin 3 is a general-purpose output pin that can be controlled with software. The pin can be configured for TTL mode output or open drain output. LED2 indicates a possible overcurrent.

The recommended operating conditions of the user GPIO connector J3 are displayed in the following tables. CAUTION: Functional operation beyond the recommended operating conditions is not assumed.

| Parameter | Min | Max |
|-----------------------|-----------|----------|
| Trigger input voltage | 3.3V ± 5% | 24V ± 5% |



| Parameter | Min | Max |
|-----------------------|-----|---------------|
| TTL-mode high voltage | - | 250mA @ 4V |
| TTL-mode low voltage | - | 250mA @ 0.05V |

| Parameter | Min | Max |
|-------------------------|-----|-------|
| Open-drain-mode voltage | - | 24V |
| Open-drain-mode current | - | 250mA |

Please make sure that enough additional power is provided via the embedded system to operate the connected devices at the user GPIO connector (J3).

2.6 On-board LEDs

There are two, status LEDs on the serializer board:

| Name | Color | Description |
|------|-------|--|
| LED1 | Green | Controlled through GPOUT_LEVEL on the I/O expander |
| LED2 | Red | Indicates overcurrent flowing out of GP_OUT in TTL/push-pull mode. |



All product and company names in this document may be trademarks and tradenames of their respective owners and are hereby acknowledged.

The Imaging Source Europe GmbH cannot and does not take any responsibility or liability for any information contained in this document. The source code presented in this document is exclusively used for didactic purposes. The Imaging Source Europe GmbH does not assume any kind of warranty expressed or implied, resulting from the use of the content of this document or the source code.

The Imaging Source Europe GmbH reserves the right to make changes in specifications, function or design at any time and without prior notice.

Last update: January 2021

© 2021 The Imaging Source Europe GmbH

All rights reserved. No part of this publication may be reproduced, distributed, or transmitted in any form or by any means, including photocopying, recording, or other electronic or mechanical methods, without the prior written permission of the publisher, except in the case of brief quotations embodied in critical reviews and certain other noncommercial uses permitted by copyright law.

All weights and dimensions are approximate. Unless otherwise specified, the lenses shown in the context of cameras are not shipped with these cameras.

Headquarters:

The Imaging Source Europe GmbH Überseetor 18, D-28217 Bremen, Germany Phone: +49 421 33591-0

North & South America:

The Imaging Source, LLC 6926 Shannon Willow Rd, S 400, Charlotte, NC 28226, USA Phone: +1 704-370-0110

Asia Pacific:

The Imaging Source Asia Co., Ltd. 2F., No.8, Xinhu 1st Road Taipei City 114, Neihu District, Taiwan Phone: +886 2-2792-3153

www.theimagingsource.com