


Technical Details

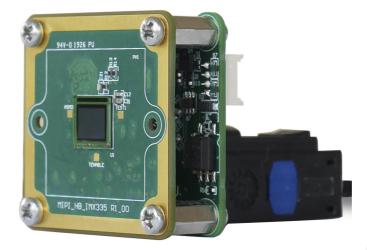

DMM 37CR0234-ML



Table of Contents



1.	Quick Facts	3
2.	Electrical Characteristics	4
2.1	Absolute Maximum Ratings	. 4
2.2	Recommended Operating Conditions	. 4
3.	Dimensional Diagrams	5
3.1	DMM 37CR0234-ML Board Camera	. 5
4.	Spectral Characteristics	6
4.1	Spectral Sensitivity - AR0234CS	. 6
5.	I/O Connector	7
6.	FPD-Link Serializer I/O Signals	9
7.	I2C I/O Expander Configuration 1	L O
8.	I2C Devices	1
9.	Status LEDs 1	L 2



1 Quick Facts

General			
Dynamic Range	10 bit		
Resolution	1920x1200		
Frame Rate at Full Resolution	100		
Pixel Formats	10-Bit Monochrome		

Optical Interface				
Sensor Type	On Semiconductor AR0234CS			
Shutter Type	Global			
Sensor Format	1/2.6 inch			
Pixel Size	3 μm			

Electrical Interface			
Interface	FPD-Link III via FAKRA connector		
Supply voltage	10-27V		
Current consumption	approx 85 mA @ 18 VDC		

Mechanical Data		
Dimensions	H: 30 mm, W: 30 mm, L: 27.5 mm	
Mass	12 g	

Adjustments		
Shutter	15 μs to 0.25 s	
Gain	0 dB to 19,2 dB	

Environmental		
Temperature (operating)	-5 °C to 45 °C	
Temperature (storage)	-20 °C to 60 °C	
Humidity (operating)	20 % to 80 % (non-condensing)	
Humidity (storage)	20 % to 95 % (non-condensing)	



2 Electrical Characteristics

2.1 Absolute Maximum Ratings


Item	Symbol	Pins	Min	Мах	Unit
Supply voltage	V_COAX		-0.3	+27.0	V

2.2 Recommended Operating Conditions

Item	Symbol	Pins	Min	Тур	Мах	Unit
Supply voltage	V_COAX		9.0	18.0	24.0	V



- **3** Dimensional Diagrams
- 3.1 DMM 37CR0234-ML Board Camera

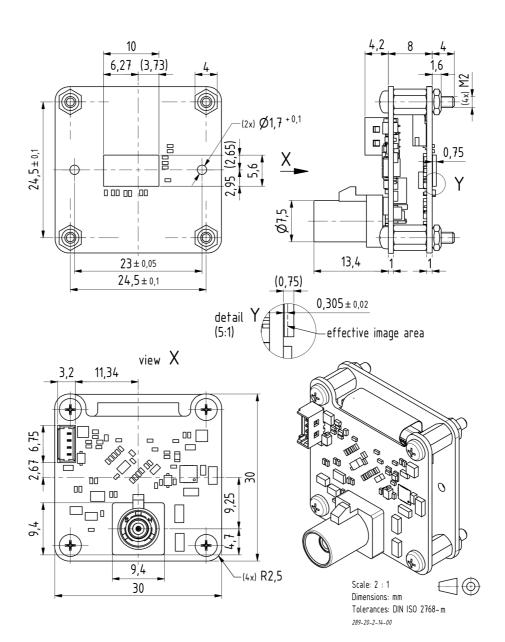




4 Spectral Characteristics

4.1 Spectral Sensitivity - AR0234CS


Sensor: ON Semiconductor AND9658/D - courtesy of ON Semiconductor

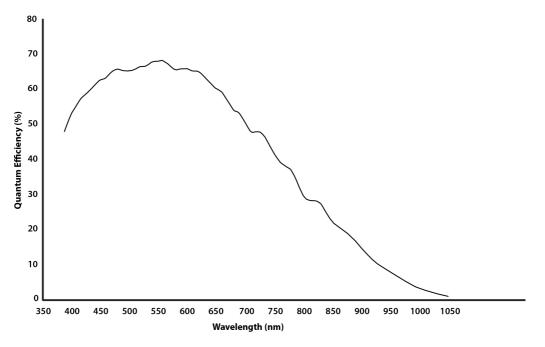



5 I/O Connector

The DMM 37CR0234-ML camera has a user GPIO I/O connector with the following pinout:

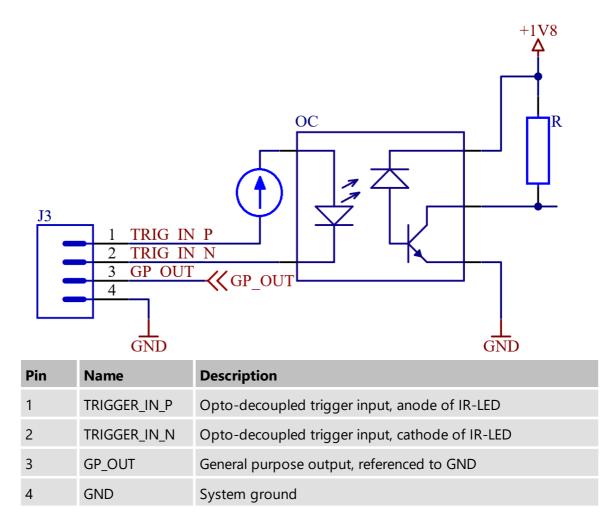

The trigger input is opto-decoupled. To drive the trigger input, a voltage must be applied to pins 1 and 2. Note: pin 1 is the positive input; pin 2 is the negative input.

Pin 3 is a general-purpose output pin that can be controlled via software. The pin can be configured for TTL mode output or open drain output. LED2 indicates a possible overcurrent.



The recommended operating conditions of the user GPIO connector J3 are displayed in the following tables. CAUTION: Functional operation beyond the recommended operating conditions is not assumed.

Parameter	Min	Мах
Trigger input voltage	3.15V	25.5V
Parameter	Min	Мах
TTL-mode high voltage	-	250mA @ 4V
TTL-mode low voltage	-	250mA @ 0.05V
Parameter	Min	Мах
Open-drain-mode voltage	-	24V
Open-drain-mode current	-	250mA

Please ensure that enough additional power is provided via the embedded system to operate the connected devices at the user GPIO connector (J3).



6 FPD-Link Serializer I/O Signals

The serializer chip DS90UB953-Q1 (Texas Instruments) has 4 GPIO pins. Their purpose is described in the following table:

Pin	Name	Dir	Description
17 (GPIO0)	STROBE	I	Strobe signal from CMOS sensor
18 (GPIO1)	TRIGGER_SER	I	External trigger signal from serializer board
27 (GPOI2)	TRIGGER	0	Trigger signal to the CMOS sensor
28 (GPOI3)	RESERVED1_GPIO3	I/O	Reserved signal

The serializer's CLK_OUT (19) pin is connected to the sensor's clock input. This means that the sensor's clock frequency is controlled through serializer PLL registers.



7 I2C I/O Expander Configuration

Various I/O functionalities of the camera are controlled through a I2C I/O Expander.

The TCA6408A part has the 7-bit I2C-address 0x20. The table below depicts which signals can be controlled through this expander:

I/O Pin	Name	Dir	Description
PO	CAM_PWR	0	Enable CMOS sensor power supply 0: Sensor power disabled 1: Sensor power enabled
P1	RESET	0	CMOS sensor reset signal 0: Sensor is in reset state 1: Sensor is in operational state
P2	GPOUT_LEVEL	0	If GPOUT_SELECT = 0: >0: LED1 off >1: LED1 on If GPOUT_SELECT = 1: >0: GPOUT is low/0 V >1: GPOUT is tri-stated or high/+5V (depends on the setting of P3)
P3	GPOUT_PUSHPULL	0	GPOUT (PicoBlade) type selection 0: GPOUT is configured as open-drain-output 1: GPOUT is configured as TTL/push-pull-output
P4	GPOUT_SELECT	0	Function of GPOUT (PicoBlade) Pin 0: STROBE from CMOS sensor board 1: GPOUT_LEVEL from serializer board
Ρ5	TRIGGER_LEVEL	0	Controls the polarity of the trigger input on the PicoBlade connector. 0: Trigger source level polarity is not inverted 1: Trigger source level polarity is inverted
P6	TRIGGER_SOURCE	0	 Controls the source of the trigger signal that is forwarded to the sensor. 0: Sensor is triggered by the trigger signal coming from the FPD-Link / deserializer chip. 1: Sensor is triggered by the trigger signal that is applied to the PicoBlade I/O connector.
P7	RESERVED_7	0	Reserved



8 I2C Devices

There are multiple I2C devices on the DMM 37CR0234-ML sensor board. The following table describes the parts and their I2C addresses:

Address (7-bit)	Device	Description
0x10	AR0234CS	Image Sensor
0x20	TCA6408A	I/O Expander
0x50	AT24C256C	EEPROM
0x57	AT24C02C	EEPROM



9 Status LEDs

NameColorDescriptionLED1GreenControlled through GPOUT_LEVEL on the I/O expanderLED2RedIndicates overcurrent flowing out of GP_OUT in TTL/push-pull
mode.

There are two status LEDs on the serializer board:



DMM 37CR0234-ML

All product and company names in this document may be trademarks and tradenames of their respective owners and are hereby acknowledged.

The Imaging Source Europe GmbH cannot and does not take any responsibility or liability for any information contained in this document. The source code presented in this document is exclusively used for didactic purposes. The Imaging Source Europe GmbH does not assume any kind of warranty expressed or implied, resulting from the use of the content of this document or the source code.

The Imaging Source Europe GmbH reserves the right to make changes in specifications, function or design at any time and without prior notice.

Last update: May 2021

© 2021 The Imaging Source Europe GmbH

All rights reserved. No part of this publication may be reproduced, distributed, or transmitted in any form or by any means, including photocopying, recording, or other electronic or mechanical methods, without the prior written permission of the publisher, except in the case of brief quotations embodied in critical reviews and certain other noncommercial uses permitted by copyright law.

All weights and dimensions are approximate. Unless otherwise specified, the lenses shown in the context of cameras are not shipped with these cameras.

Headquarters:

The Imaging Source Europe GmbH Überseetor 18, D-28217 Bremen, Germany Phone: +49 421 33591-0

North & South America:

The Imaging Source, LLC 6926 Shannon Willow Rd, S 400, Charlotte, NC 28226, USA Phone: +1 704-370-0110

Asia Pacific:

The Imaging Source Asia Co., Ltd. 2F., No.8, Xinhu 1st Road Taipei City 114, Neihu District, Taiwan Phone: +886 2-2792-3153

www.theimagingsource.com