



## **Table of Contents**



1.	Quick Facts	3
2.	Electrical Characteristics	5
2.3	1 Absolute Maximum Ratings	5
2.2	Recommended Operating Conditions	5
3.	Dimensional Diagrams	6
3.3	DFM 37MR0234-ML Board Camera	6
4.	Spectral Characteristics	7
4.3	Spectral Sensitivity - AR0234CS	7
5.	Connector Description	8
6.	I2C Devices	11
7.	CSI Lane Configurations	12
8.	Programming the Image Sensor	13
8.3	1 Input Clock	13
8.2	Power-up Sequence	13
8.3	Further Assistance	13



## 1 Quick Facts

General				
Dynamic Range	10 bit			
Resolution	1920x1200			
Frame Rate at Full Resolution	120			
Pixel Formats	10-Bit Bayer (GR)			

Optical Interface	
Sensor Type	On Semiconductor AR0234CS
Shutter Type	Global
Sensor Format	1/2.6 inch
Pixel Size	3.0 µm

Electrical Interface				
Interface	The Imaging Source MIPI CSI-2 Sensor Board Connector			
Number of active CSI lanes	4			
Supply voltage	5V (±10%)			
Current consumption	approx 85 mA @ 5 VDC			

Mechanical Data				
Dimensions	H: 30 mm, W: 30 mm, L: 5.45 mm			
Mass	4 g			

Adjustments	
Shutter	15 μs to 0.25 s
Gain	0 dB to 19,2 dB

## **Quick Facts**



Environmental				
Temperature (operating)	-5 °C to 45 °C			
Temperature (storage)	-20 °C to 60 °C			
Humidity (operating)	20 % to 80 % (non-condensing)			
Humidity (storage)	20 % to 95 % (non-condensing)			



### **2** Electrical Characteristics

### 2.1 Absolute Maximum Ratings

Item	Symbol	Pins	Min	Max	Unit
Supply voltage	V_IN	+5V_VDD	-0.3	+6.0	٧
I/O voltage	V_IO	CAM_PWR RESET CLK STROBE TRIGGER	-0.3	+2.1	V
I2C voltage	V_I2C	I2C_SCL I2C_SDA	-0.3	+2.1	V


## 2.2 Recommended Operating Conditions

Item	Symbol	Pins	Min	Тур	Max	Unit
Supply voltage	V_IN	+5V_VDD	4.5	5.0	5.5	V
I/O voltage	V_IO	CAM_PWR RESET CLK STROBE TRIGGER	1.7	1.8	1.9	V
I2C voltage	V_I2C	I2C_SCL I2C_SDA	1.7	1.8	1.9	V



## 3 Dimensional Diagrams


### 3.1 DFM 37MR0234-ML Board Camera

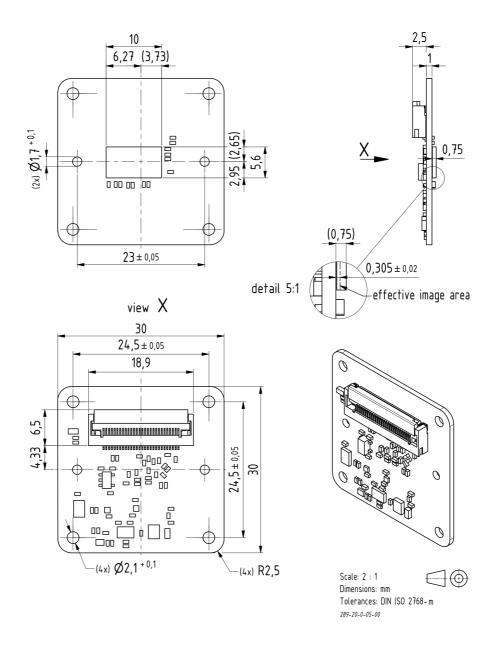



## 4 Spectral Characteristics


## 4.1 Spectral Sensitivity - AR0234CS

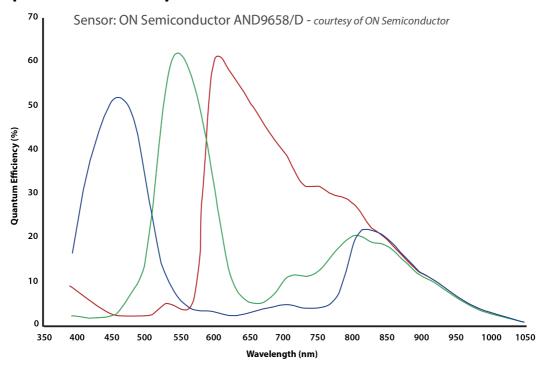



### **5** Connector Description

The DFM 37MR0234-ML sensor board is connected to the system via the *The Imaging Source MIPI CSI-2 Sensor Board Connector*.

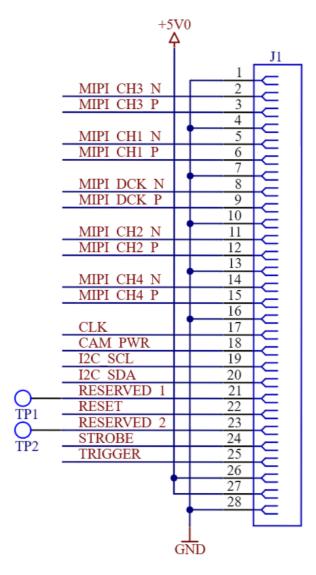

## **Connector Description**



#	Name	Туре	Description	
1	GND	GND	Ground	
2	MIPI_CH3_N	0	MIPI CSI-2 output	
3	MIPI_CH3_P	0	MIPI CSI-2 output	
4	GND	GND	Ground	
5	MIPI_CH1_N	0	MIPI CSI-2 output	
6	MIPI_CH1_P	0	MIPI CSI-2 output	
7	GND	GND	Ground	
8	MIPI_DCK_N	0	MIPI CSI-2 clock	
9	MIPI_DCK_P	0	MIPI CSI-2 clock	
10	GND	GND	Ground	
11	MIPI_CH2_N	0	MIPI CSI-2 output	
12	MIPI_CH2_P	0	MIPI CSI-2 output	
13	GND	GND	Ground	
14	MIPI_CH4_N	0	MIPI CSI-2 output	
15	MIPI_CH4_P	0	MIPI CSI-2 output	
16	GND	GND	Ground	
17	CLK	I	Reference clock input (with 1k pull-down/termination resistor on sensor board)	
18	CAM_PWR	I	High active camera power enable signal (10k pull-down on sensor board)	
19	I2C_SCL	I/O	I2C serial clock	
20	I2C_SDA	I/O	I2C serial data	
21	RESERVED_1	1	Do not use	
22	RESET	I	Reset sensor to default state when low (2.2k pull-down on sensor board)	
23	RESERVED_2	1	Do not use	
24	STROBE	0	Strobe output	
25	TRIGGER	I	Trigger input (10k pulldown on sensor board)	
26	+5V_VDD	PWR	5V (±10%) power supply	
27	+5V_VDD	PWR	5V (±10%) power supply	
28	GND	GND	Ground	

## **Connector Description**



All I/Os have the same I/O voltage of 1.8V. The manufacturer part number of the Hirose connector is FH28D-28S-0.5SH(98).



### 6 I2C Devices

There are multiple I2C devices on the DFM 37MR0234-ML sensor board. The following table describes the parts and their I2C addresses:

Address (7-bit)	Description
0x10	Image Sensor
0x50	EEPROM AT24C256C
0x57	EEPROM AT24C02C

## **CSI Lane Configurations**



## **7** CSI Lane Configurations

The DFM 37MR0234-ML sensor board can be operated with 2 or 4 CSI lanes connected.

The following table shows the relationship between used CSI lanes and maximum frame rate:

No of CSI Lanes	Bits Per Pixel	<b>Maximum Frame Rate at Full Resolution</b>
4	10	120
2	10	60



### 8 Programming the Image Sensor

The data sheet for the AR0234CS image sensor is not publicly available.

### 8.1 Input Clock

The CLK pin has to be connected to a clock source. The following table lists the ranges of clock frequencies that are supported by the image sensor:

Minimum	Typical	Maximum	Unit
6	27	64	Hz

The driver provided by The Imaging Source assumes a CLK frequency of **27 MHz**. For quick integration with existing software, using this frequency is recommended.

### 8.2 Power-up Sequence

Delay	Action
-	Set RESET to high
-	Set CAM_PWR to Hi-Z
-	Supply 5V to 5V_VDD
-	Supply input clock to CLK
1 μs	Set CAM_PWR to high
35 ms	Set RESET to low
1.5 µs	Set RESET to high
1.5 µs	Write sensor registers

#### 8.3 Further Assistance

For more detailed information, register settings and assistance integrating the sensor board into your product, please contact The Imaging Source support.



#### **DFM 37MR0234-ML**

All product and company names in this document may be trademarks and tradenames of their respective owners and are hereby acknowledged.

The Imaging Source Europe GmbH cannot and does not take any responsibility or liability for any information contained in this document. The source code presented in this document is exclusively used for didactic purposes. The Imaging Source Europe GmbH does not assume any kind of warranty expressed or implied, resulting from the use of the content of this document or the source code.

The Imaging Source Europe GmbH reserves the right to make changes in specifications, function or design at any time and without prior notice.

Last update: June 2021

© 2021 The Imaging Source Europe GmbH

All rights reserved. No part of this publication may be reproduced, distributed, or transmitted in any form or by any means, including photocopying, recording, or other electronic or mechanical methods, without the prior written permission of the publisher, except in the case of brief quotations embodied in critical reviews and certain other noncommercial uses permitted by copyright law.

All weights and dimensions are approximate. Unless otherwise specified, the lenses shown in the context of cameras are not shipped with these cameras.

#### **Headquarters:**

The Imaging Source Europe GmbH Überseetor 18, D-28217 Bremen, Germany Phone: +49 421 33591-0

#### North & South America:

The Imaging Source, LLC 6926 Shannon Willow Rd, S 400, Charlotte, NC 28226, USA Phone: +1 704-370-0110

#### **Asia Pacific:**

The Imaging Source Asia Co., Ltd. 2F., No.8, Xinhu 1st Road Taipei City 114, Neihu District, Taiwan Phone: +886 2-2792-3153

www.theimagingsource.com